




Owner's Manual Epix – Front Baffle





installation

- Remove all screws on MDF protective cover panel on back box using Phillips head screw driver. Now gently remove MDF protective
- 2. Clear away any excess plasterboard flushing compound if necessary
- 3. Orientate front baffle to align terminal panel will terminal cover on front baffle (see diagram)
- **4.** Connect 3 X block connectors on front baffle to corresponding connectors on back box (see diagram)
- **5.** Carefully push front baffle into back-box edging.
- **6.** Fasten front baffle to backbox using supplied Alan key head screws.

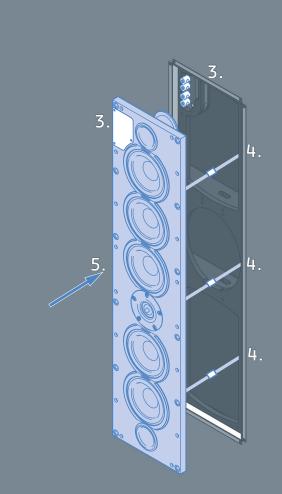

installation **7.** Attach grille if required.

Krix Loudspeakers Pty Ltd 14 Chapman Road Hackham SA 5163 Australia

T 61 8 8384 3433 F 61 8 8384 3419 listen@krix.com

Rev #10003

krix.com